

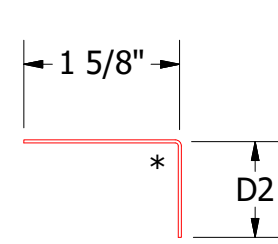
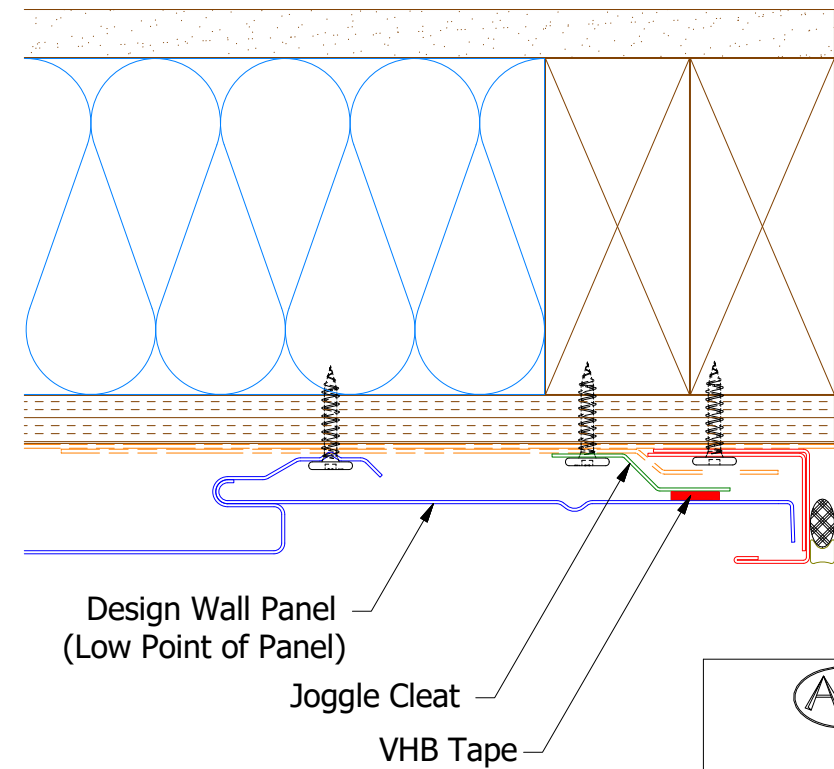
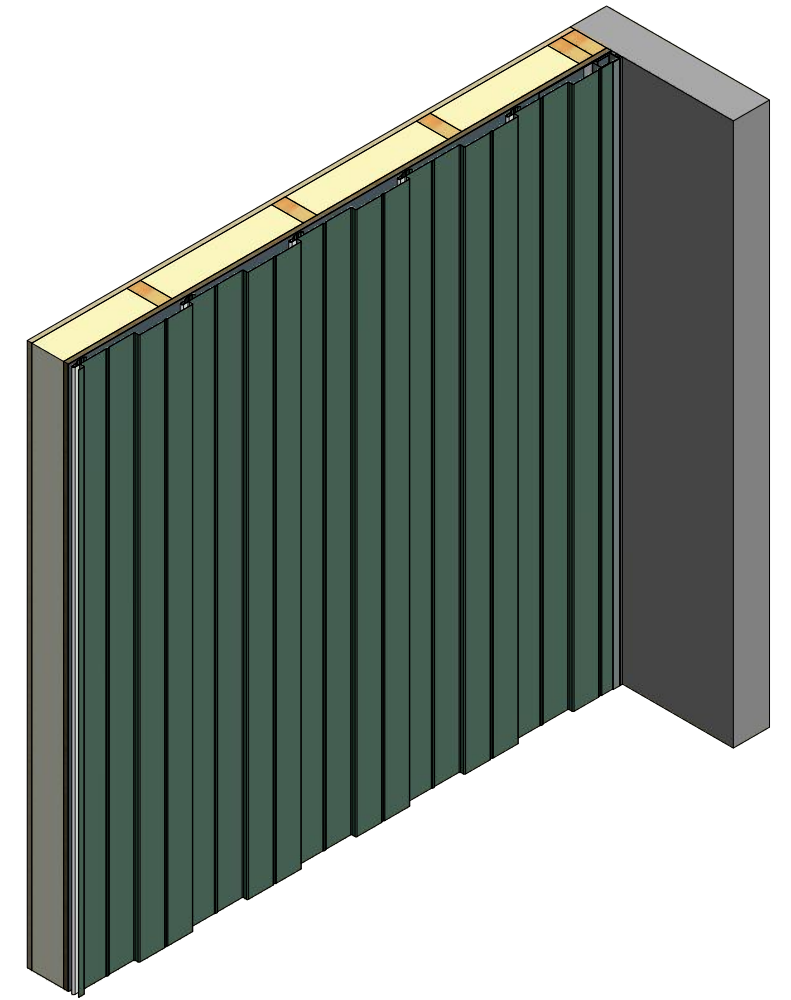



Vertical Panel

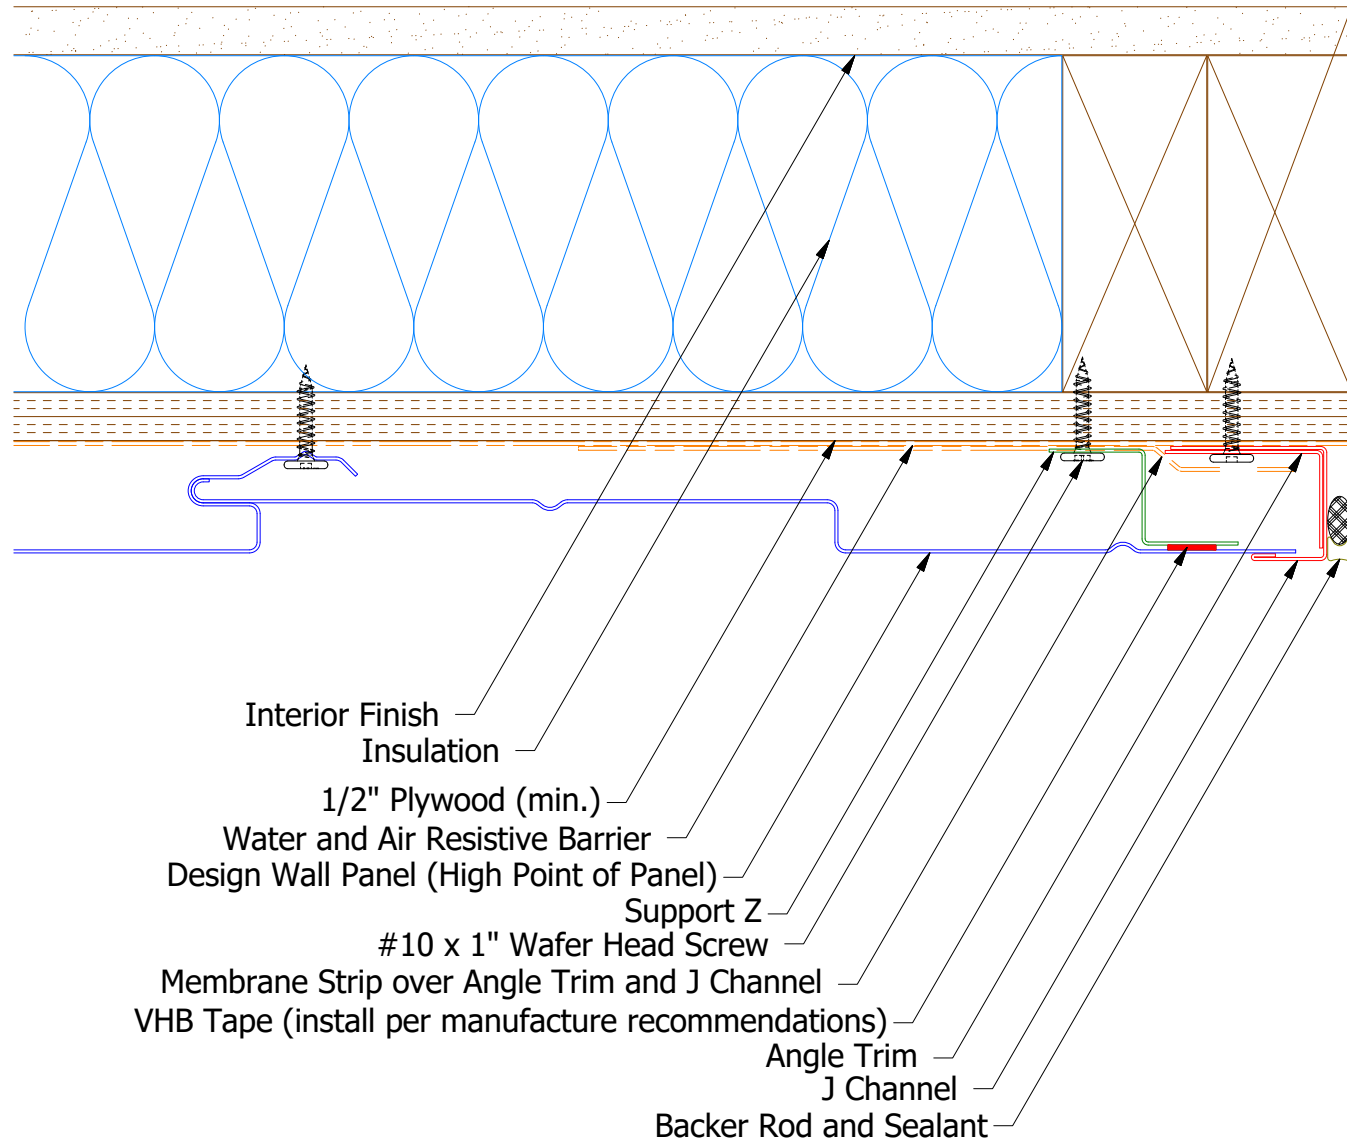


Angle Trim
 DWA680: D2=1"
 DSA680: D2=1 3/4"

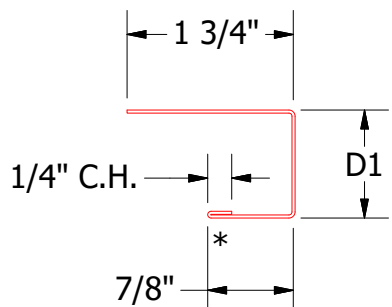

J Channel
 DWA118: D1=1 1/8"
 DSA178: D1=1 7/8"

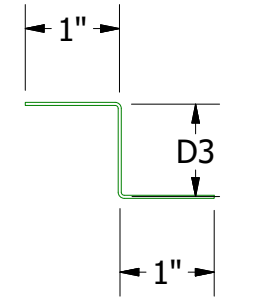

Support Z
 DWA681: D3=1"
 DSA681: D3=1 5/8"

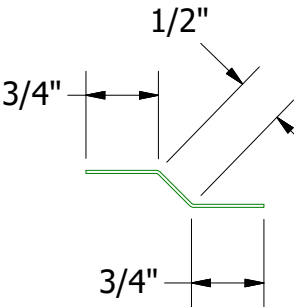

DSA975/DWA975 - Joggle Cleat

ATAS ATAS INTERNATIONAL, INC
 Allentown PA
 610-395-8445
 Mesa AZ
 480-558-7210

TITLE		Design Wall Endwall Detail	
DWG. NO.	DR	DMR	DATE 6/23/2016
1	APP	DAS	DATE 7/25/16
REV. NO.	DATE	DESCRIPTION OF REVISION	BY APP
1	7/13/2021	Changed Pop Rivets to VHB Tape	DMR
SH. SIZE		SCALE	
B		X:X	

Note: * denotes color side.
Note: stainless steel pop rivets maybe needed along with VHB tape for longer panels.